



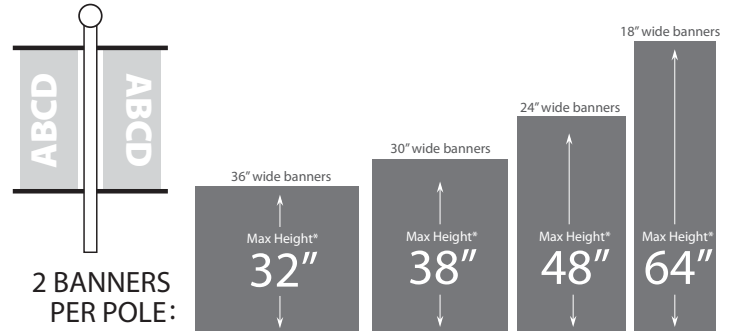



WindPro Banner Bracket Hardware Banding Guidelines

Rev. 6/12/09

Standard 9/16th SGB Bands


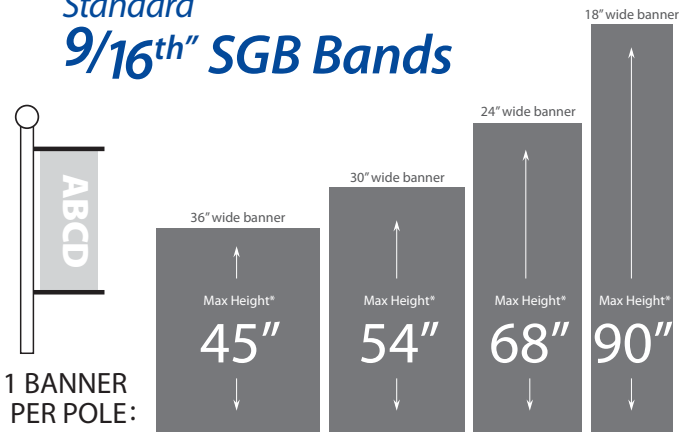


3/4" Single

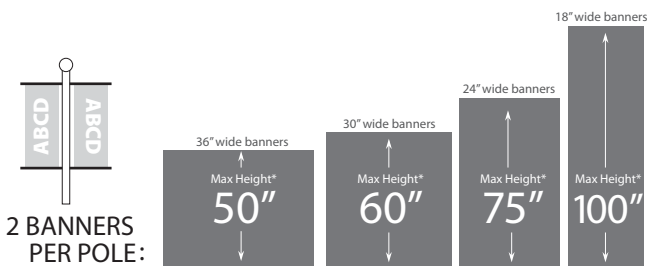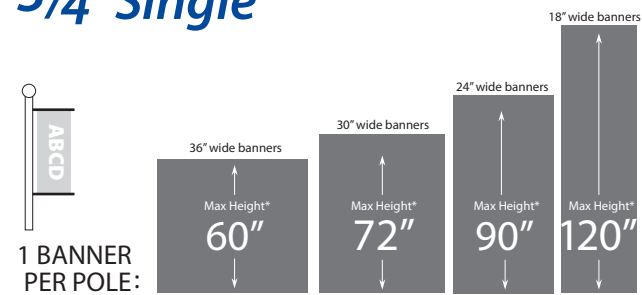

not to scale

3/4" Double Wrap

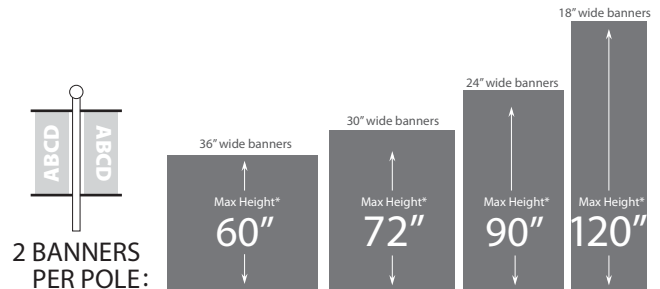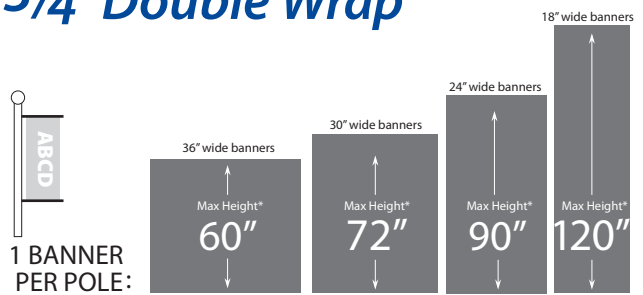

not to scale

Banding Options:

9/16" Screw Gear Bands (SGB)

Single Wrap of 3/4" tool-applied banding

Double wrap of 3/4" tool-applied banding

Q. How much banding do I need?

- A.** Measure around the pole with a tape measure. (This is the circumference.) Add 6 inches (for tightening). Now multiply that by 4 (4 bands per pole). Now multiply that by how many poles you are going to banner. That's your answer for single-wrap; for double-wrap multiply again by 2.

Banner Size* Inches	18" wide Banners X Max Height below		24" Wide Banners X Max Height below		30" Wide Banners X Max Height below		36" Wide Banners** X Max Height below		Maximum Single Banner Size SF	Maximum Total Sq. Ft. for 2 Banners per Pole
	1	2	1	2	1	2	1	2		
9/16" SGB	90"	64"	68"	48"	54"	38"	45"	32"	11.25	16
Single Wrap 3/4"	120"	100"	90"	75"	72"	60"	60"	50"	15	25
Double Wrap 3/4"	120"	120"	90"	90"	72"	72"	60"	60"	15	30

*Mounting banners larger than the maximum recommended size will void warranty

**No warranty on 36" rods/banners